

Him 1>34 ja Rel 1>12 á 10A
Him 35>82 á 16A

Him 7>10 ja Rel 12
ristikytettävissä
himmenninhuoneessa
patch-rasioihin

Trussi 5

Him 73-77
Rel 10

Työvalot
Him 6

Him 78-82
Rel 11

Trussi 4

Him 63-67
Rel 8

Him 68-72
Rel 9

Trussi 3

Him 53-57
Rel 6

Työvalot
Him 5

Him 58-62
Rel 7

Trussi 2

Him 43-47
Rel 4

Him 48-52
Rel 5

Verhovalot
Him 4

Vapaat syötöt
Seinä oikea

3~16A
3~32A
(25A sulakkeet)
3~63A

Lattia oikea

Him 27-30
Patch 14

Patch 15-19

Patch 10-11

Lattia vasen

Him 23-26

Patch 12-13

Patch 10-11

Him 13-17

Suora

Him 18-22

Suora

Him 31+35-37
Rel 1+2

Him 32-33+38-39
Patch 9
Rel 3

Him 34+40-42
Rel 1+2

Trussi 1

Patch 1 Patch 2

Patch 3 Patch 4

Patch 5 Patch 6

Patch 7 Patch 8

Patch 1>8 katossa kiinteän valotangon päällä

Salivalot
Him 1-3

RAUMA-SALI
Päivitetty 22.2.2013

Him 11

TARKKAAMO

Him 12